
ROCKVILLE


DMAC Series

ALUMINUM WAKEBOARD TOWER SPEAKER PODS


ASSEMBLY GUIDE

Thank you for purchasing these MAC series Aluminum Speaker Pods. Please read these instructions carefully before use. Make sure all parts are included. If any parts are missing please contact our technical help line at 1-646-758-0144, 24 hours a day/7 days a week.

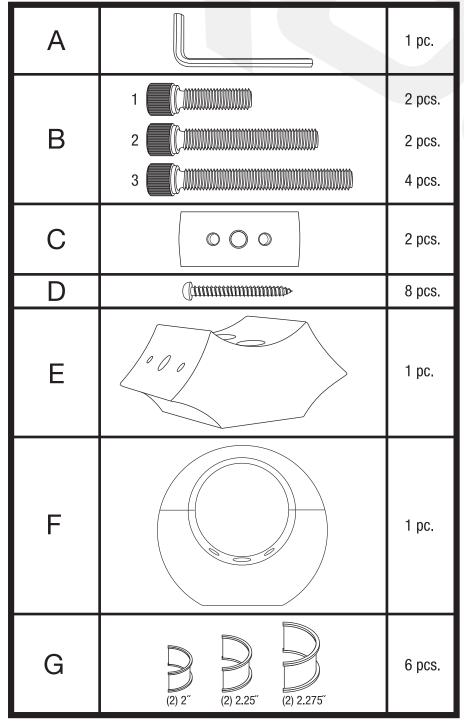


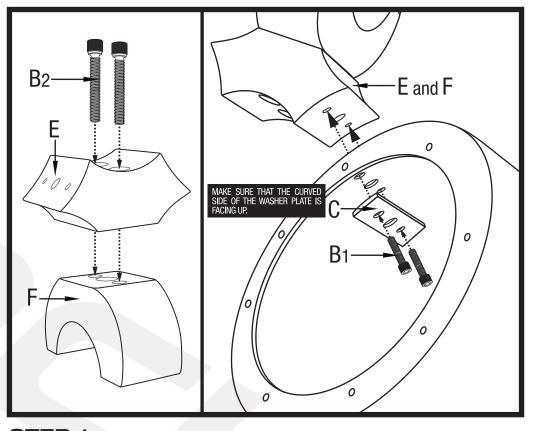


STEP 1 Remove the top half of the clamp. Attach the bottom half of the clamp to the speaker interconnect using B2 bolts. Use the B1 bolts and the washer plates to attach one speaker can to each side of the speaker bridge. Make sure that the curved side of the washer plate is facing up.

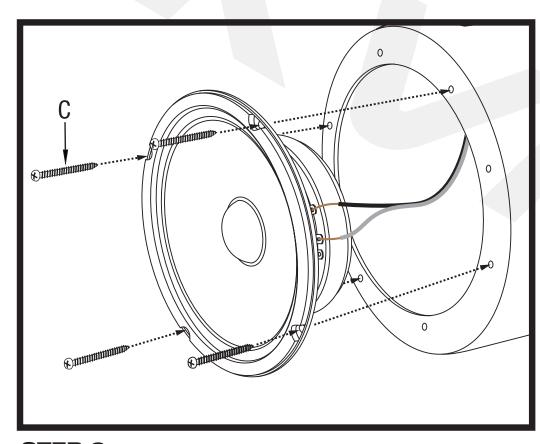

STEP 3 Before beginning, make sure that the speaker wires are connected to the speaker and that they have been threaded through the predrilled hole at the top of the can. Align the mounting holes on the speaker with the corresponding holes on the can. Use a phillips head screwdriver to tighten the screws. Although the predrilled holes will accomodate most speakers on the market, there may be some that don't fit. If that is the case, you can drill holes into lip of the can to line-up with your speaker's mounting holes.

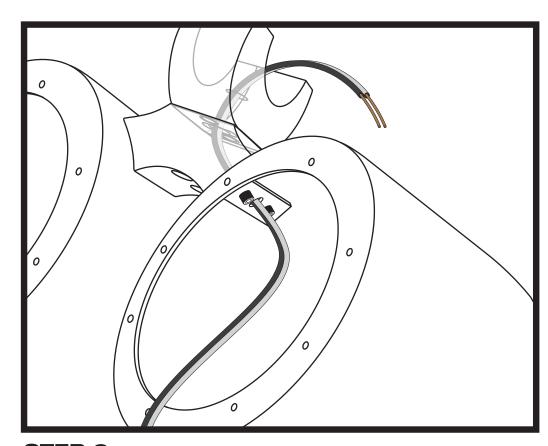

STEP 2 Thread the speaker wire through the predrilled center hole and out through the clamp as shown in the illustration. Repeat for the second can.

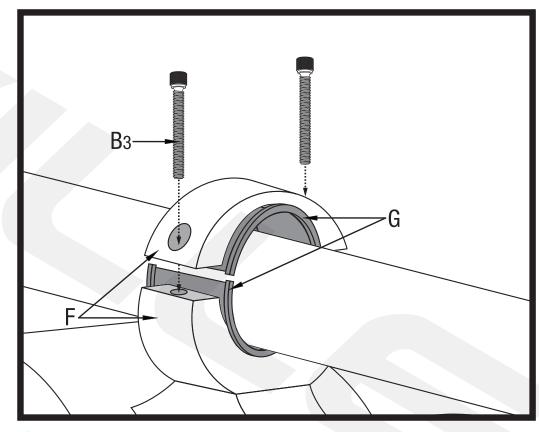

STEP 4 If your wake tower has predrilled holes for routing speaker cables, insert the cables at this time. If the clamp does not fit snugly, use one of the 4 included rubber inserts. Place the top half of the clamp over the wake tower pole and attach to the lower half. Do not overtighten the screws. If you need an insert other than the ones that are included, email us at: sales@rockvilleaudio.com.